

## MITSUBISHI ASX

No.: 4037.1 Engine & gearbox


Year: 2010-

Engine: All

Transmission: All

## FITTING KIT

1. Bolt M8x30.....	2 pc
2. Nut M8.....	2 pc
3. Spring washer 8.....	2 pc
4. Washer 8.....	4 pc
5. Insert nut M8x65/10.....	2 pc
6. Insert brad M8.....	2 pc

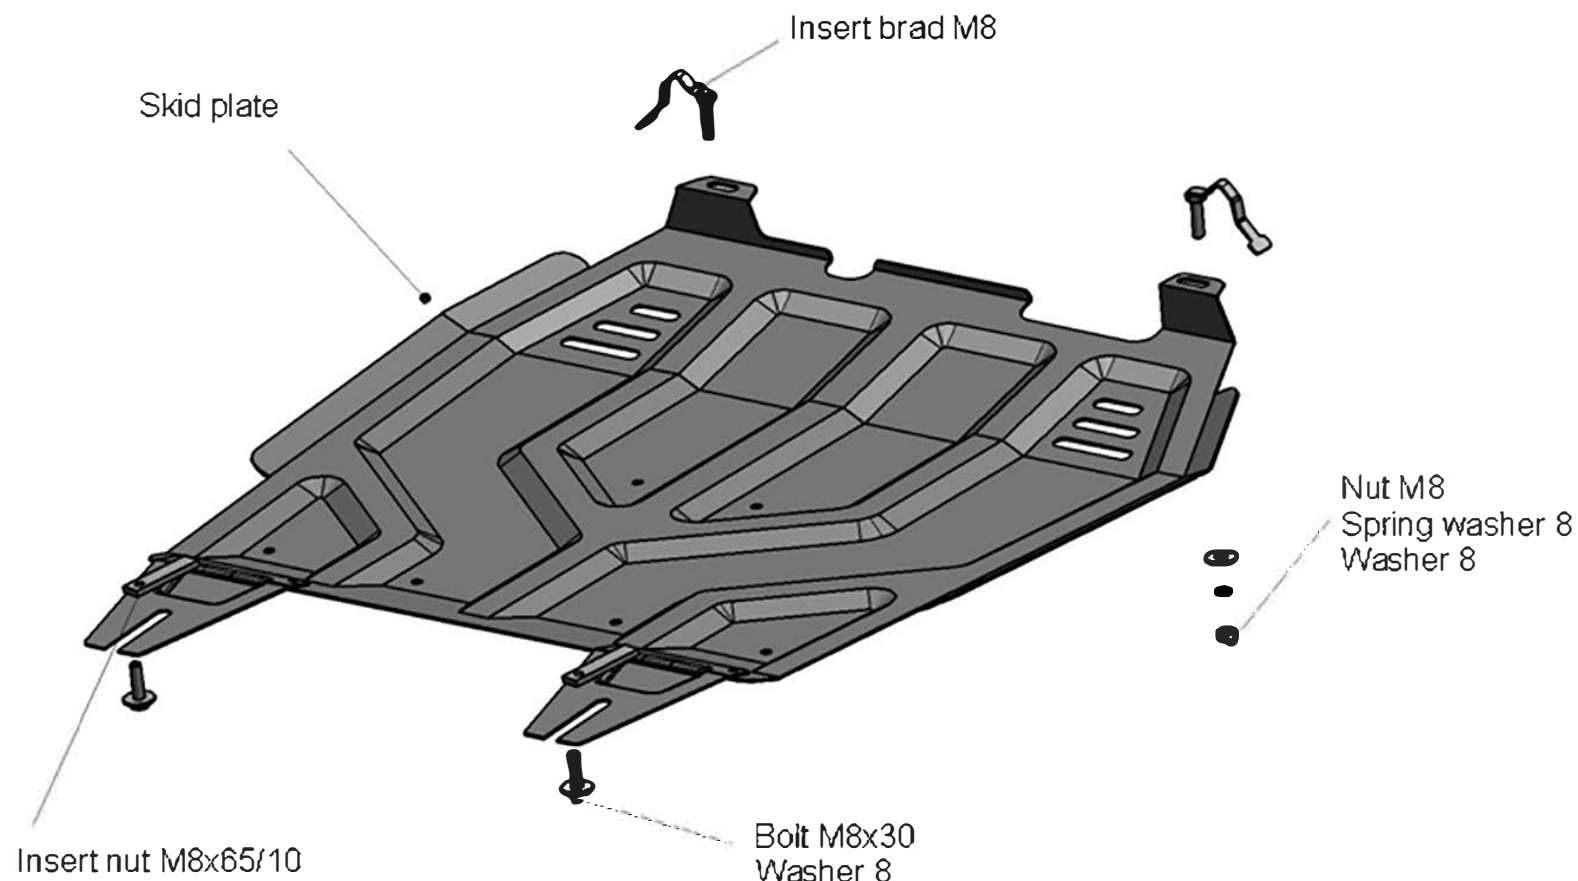

## INSTALLATION INSTRUCTIONS

1. Take 2 caps out of radiator bar where they fix factory guard. Place insert brads M8 into apertures of radiator bar.
2. Place insert nuts M8x65/10 with bolts M8x30 into apertures of underframe.
3. Place rear end of skid plate on mounted bolts M8x30, then fix its front end to insert brad with nuts M8.
4. Tighten all screws (50 Nm for M10, 30 Nm for M8, 10 Nm for M6). Do not use pneumatic or power tools to tighten.