




PORSCHE CAYENNE 2011 - 2017












- | | |
|-------------------------------------|------------------------------------|
| TR MONTAJ TALIMATI | GB FITTING INSTRUCTIONS |
| F INSTRUCTIONS DE MONTAGE | P INSTRUCOES DE MONTAGEM |
| NL MONTAGEHANDLEIDING | PL INSTRUCJE WBUDOANIA |
| H FELSZERESLESI UTASITAS | ENG MOUNTING INSTRUCTIONS |
| D EINBAUANLEITUNG | SWE MONTAGEANVISNING |
| CZ POKYNY PRO MONTAZ | SLO NAVODILA ZA INSTALACIJO |
| ESP INSTRUCCIONES DE MONTAJE | RU ИНСТРУКЦИЯ ПО УСТАНОВКЕ |

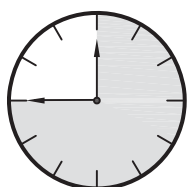

45 MINUTE

M5802971-C

MONTAJ SETİ / INSTALLATION SET

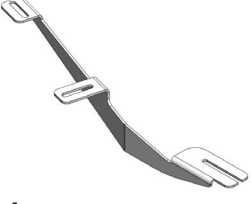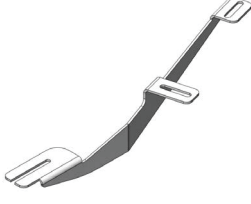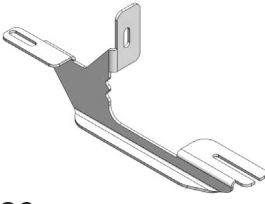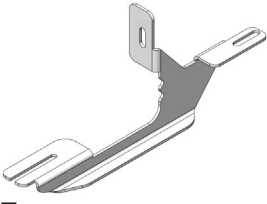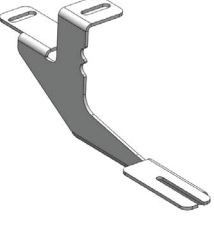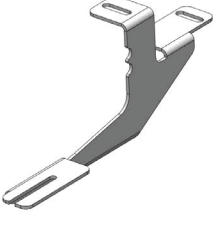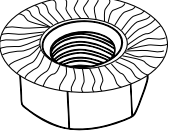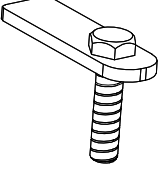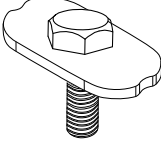 H24	 H25	 H26	 H27
A SOL ÖN BRAKET LEFT FRONT BRACKET	B SAĞ ÖN BRAKET RIGHT FRONT BRACKET	C SOL ORTA BRAKET LEFT MIDDLE BRACKET	D SAĞ ORTA BRAKET RIGHT MIDDLE BRACKET
 H28	 H29		
E SOL ARKA BRAKET LEFT REAR BRACKET	F SAĞ ARKA BRAKET RIGHT REAR BRACKET	G M8 x 20 (x12)	H M8 (x 12)
			
I M10 (x 12)	J M10 (x 10)	K M10 (x 2)	

REQUIRED TOOLS



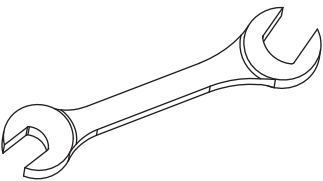
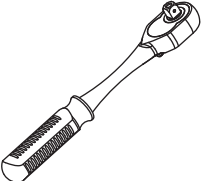
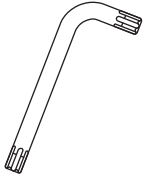
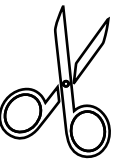
 SW13	 SW17	 SW17			
		SW13			



Fig. 1




Fig. 2



Fig. 3



Fig. 4

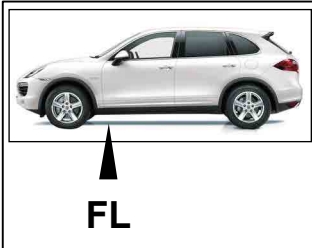

FL



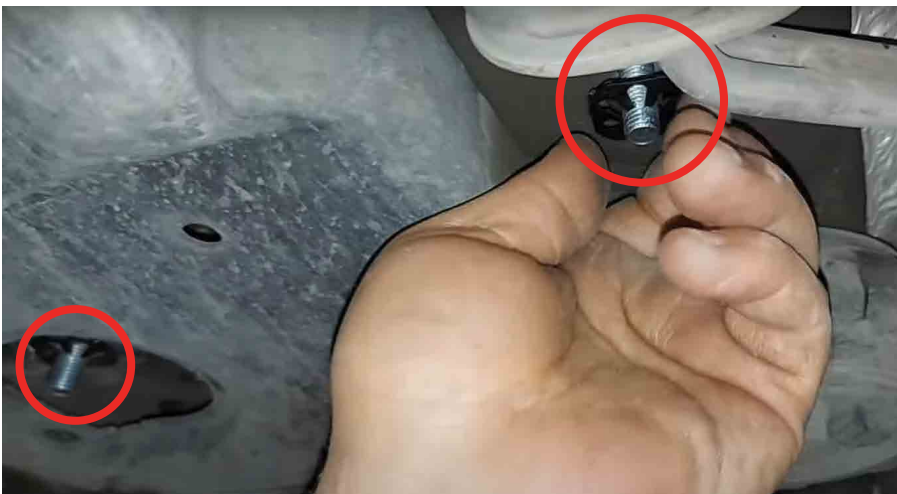


Fig. 5

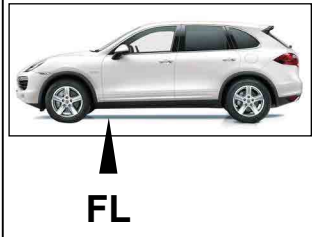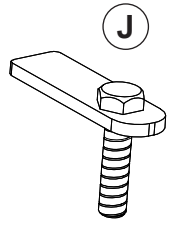

FL



Fig. 6



FL

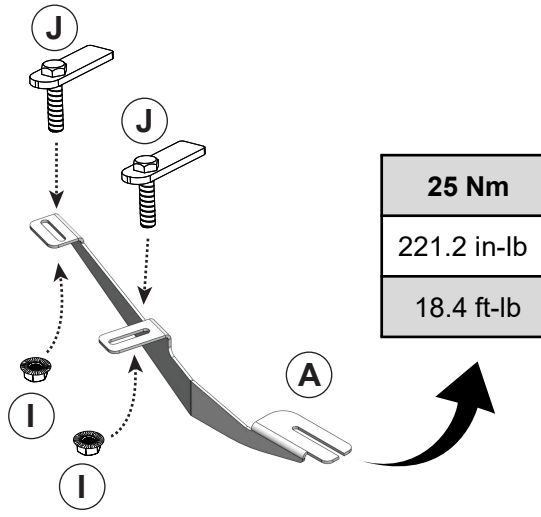


Fig. 7



ML



Fig. 8

Fig. 9

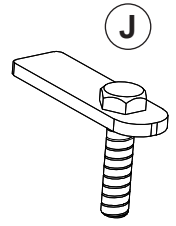


Fig. 10



Fig. 11

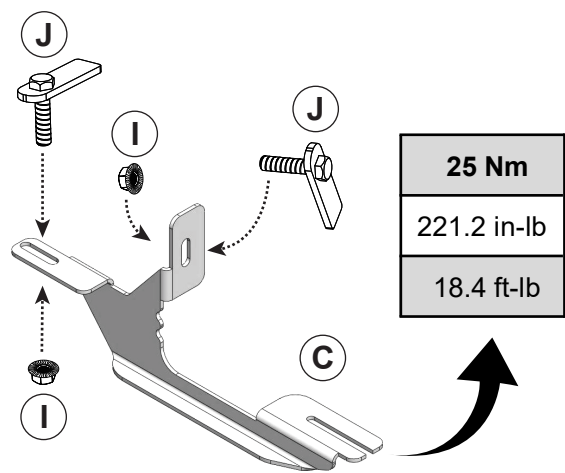


Fig. 12

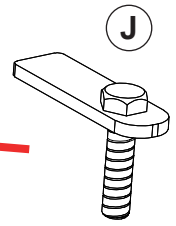
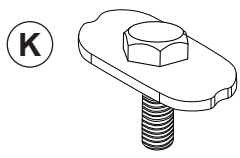
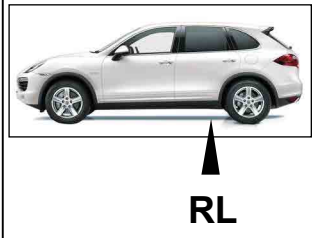


Fig. 13

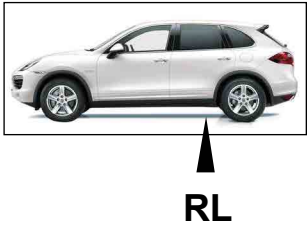


Fig. 14

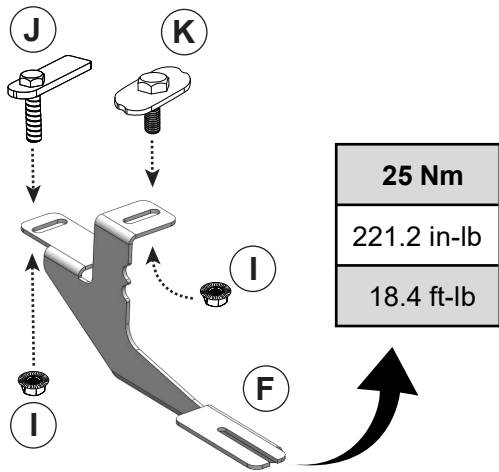
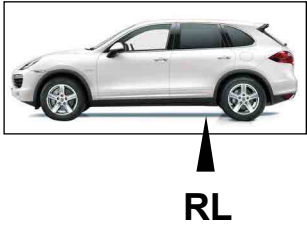


Fig. 15

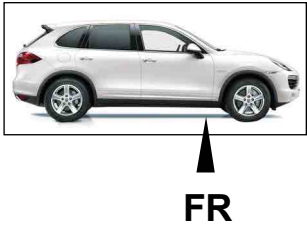


Fig. 16

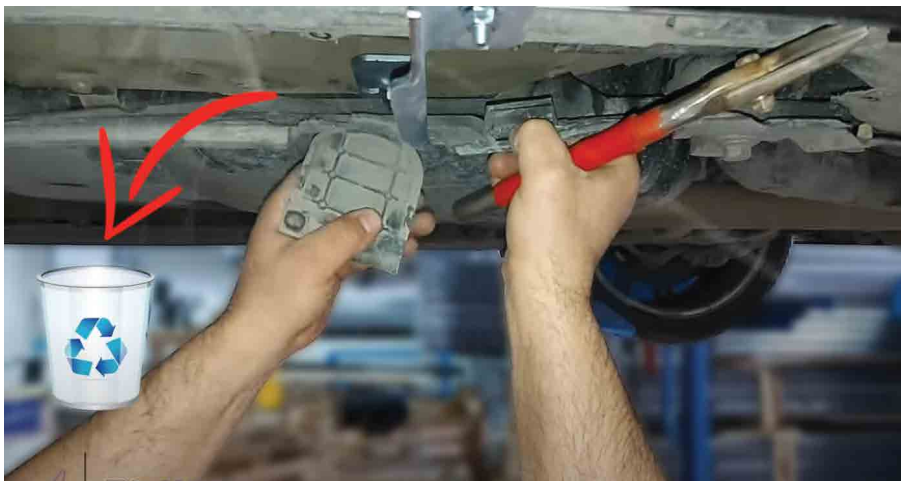
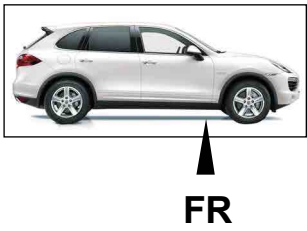


Fig. 17

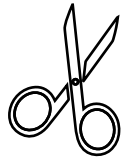


Fig. 18

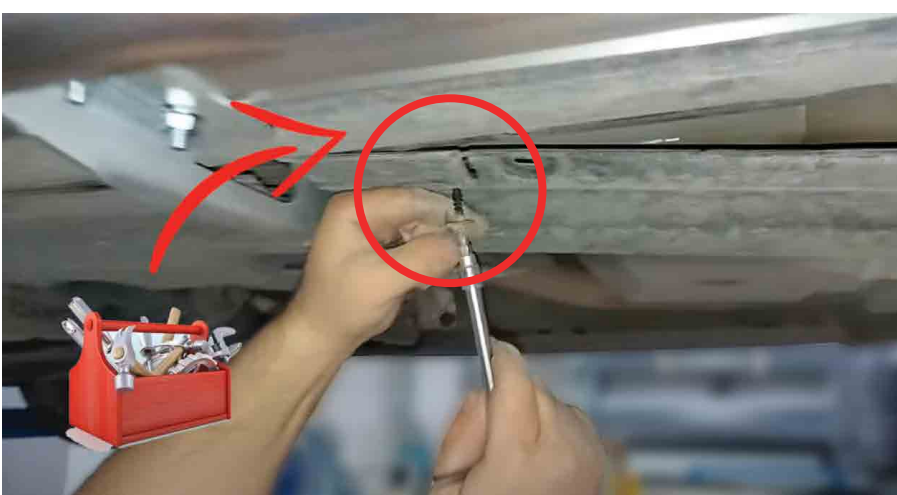


Fig. 19



Fig. 20

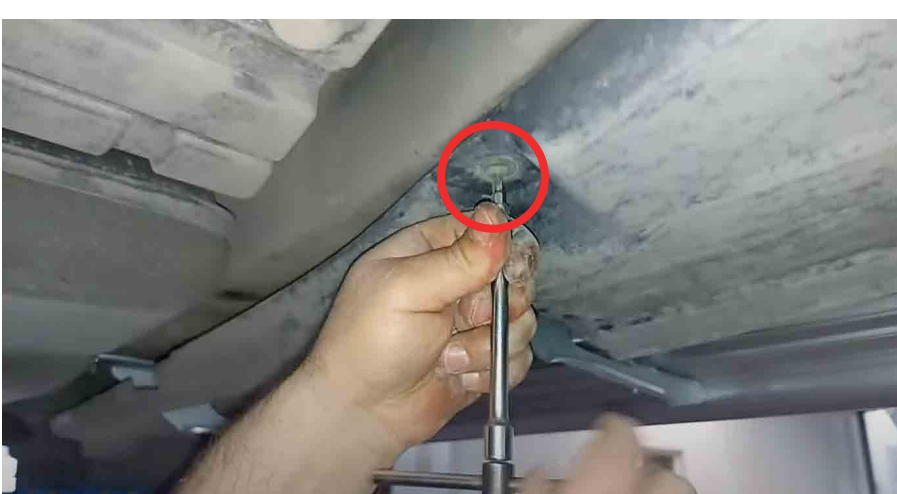


Fig. 21



RL

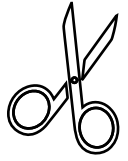


Fig. 22




RL



Fig. 23



RL

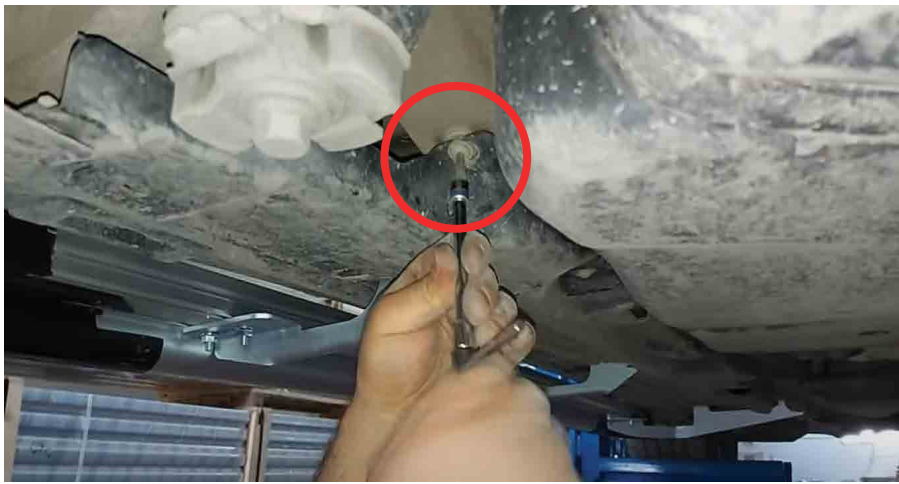

15 Nm
132.7 in-lbf
11.0 ft-lbf

