
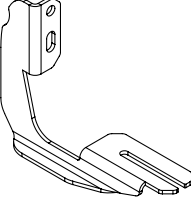
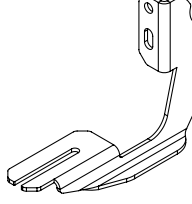
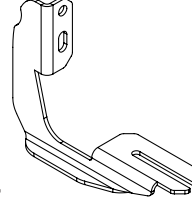
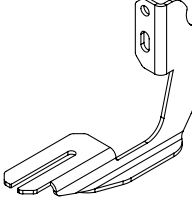
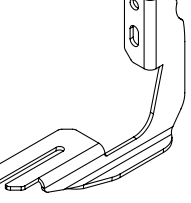
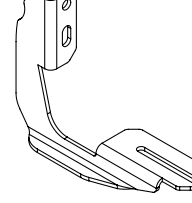
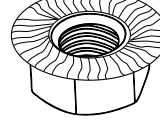





NISSAN NAVARA 2005-2016 NISSAN PATHFINDER 2005- / NISSAN PATROL 2007-

MONTAJ SETİ / INSTALLATION SET

 F65	 F66	 F67	 F68
A SOL ÖN BRAKET LEFT FRONT BRACKET	B SAĞ ÖN BRAKET RIGHT FRONT BRACKET	C SOL ORTA BRAKET LEFT MIDDLE BRACKET	D SAĞ ORTA BRAKET RIGHT MIDDLE BRACKET
 F69	 F70	 G	 H
E SOL ARKA BRAKET LEFT REAR BRACKET	F SAĞ ARKA BRAKET RIGHT REAR BRACKET	G M8 (x 24)	H M8 x 20 (x12)

REQUIRED TOOLS

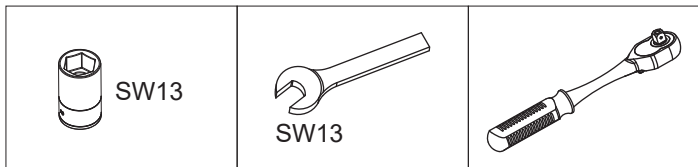


45 MINUTE


M5003971-C




FL

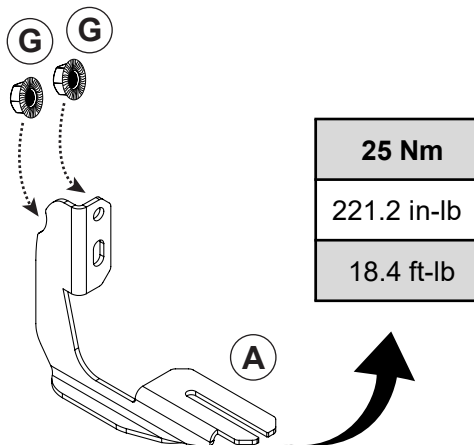

ML

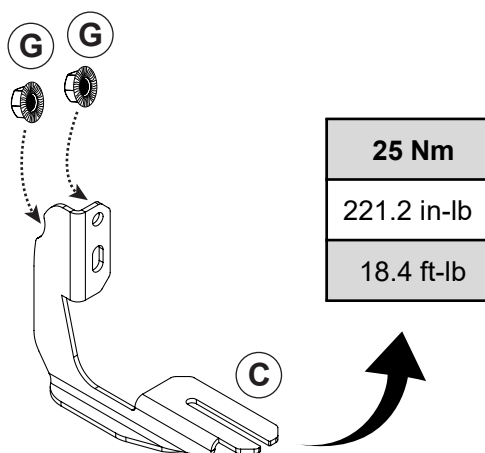

RL

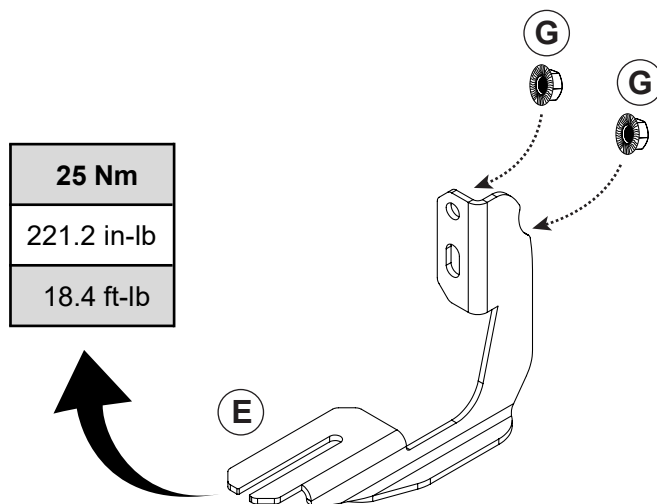

15 Nm
132.7 in-lbf
11.0 ft-lbf

